




LET'S MAKE A
DIFFERENCE IN
REDUCING
COMPLEXITY.
SULFUR RECOVERY
with EVONIK.

SULFUR RECOVERY with Evonik

Sulfur recovery is a crucial process in various industries, especially those involved in refining petroleum and natural gas. Sulfur-containing compounds in these raw materials can be harmful to the environment and pose health hazards. The Claus process, a time-tested and reliable method, effectively recovers sulfur from these sources, ensuring cleaner emissions and compliance with environmental regulations.

Evonik is a complete-package SRU & TGTU catalyst supplier. We manufacture and supply the Claus and Tail Gas catalysts needed to achieve and maintain high sulfur recovery efficiency. Evonik leads in sustainability for sulfur recovery catalysts, providing two tail gas catalysts with carbon footprints significantly smaller than competitive tail gas catalysts.

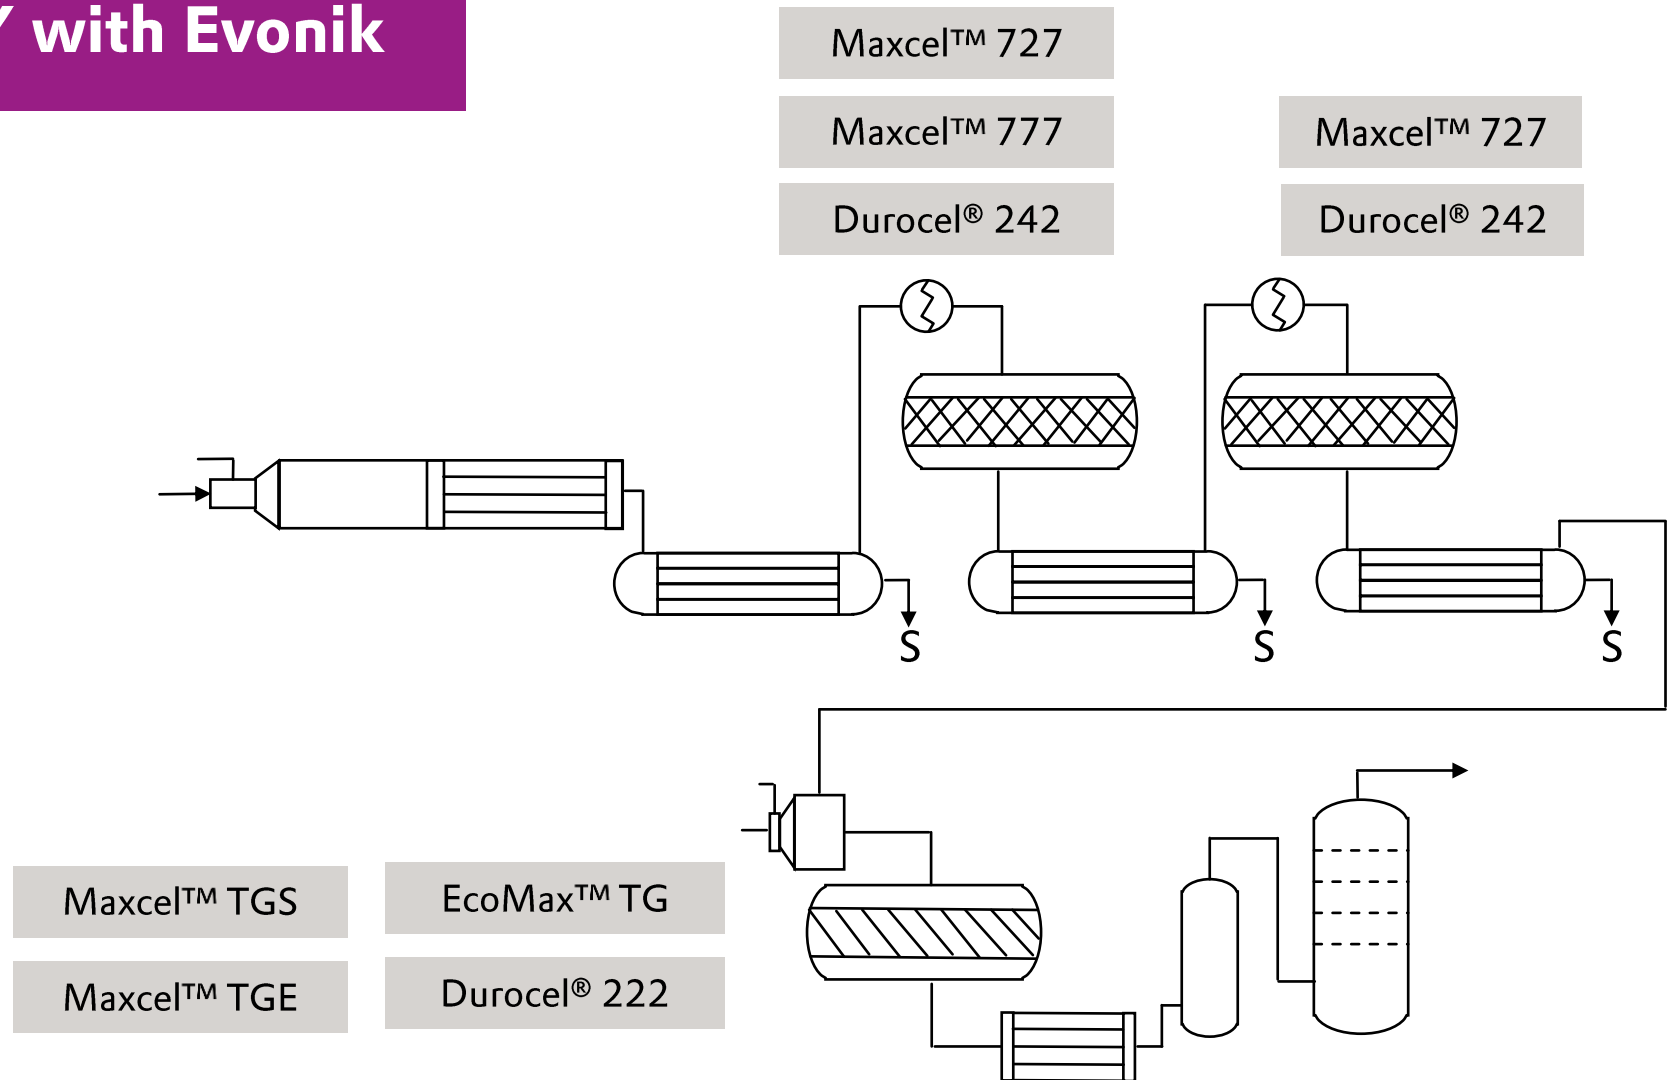


Claus Catalysts are an important part of the Claus process. They are essential in promoting the chemical reactions required for efficient sulfur recovery. These catalysts act as agents to accelerate the conversion of hydrogen sulfide (H_2S) and sulfur dioxide (SO_2) into elemental sulfur (S_8), a valuable and safe byproduct.

Evonik's **Maxcel™** Claus catalysts are recognized around the world for reliability and activity. Our catalysts have been installed in more than 250 sulfur recovery units around the world, spanning the last 25+ years. Our catalysts are proven in sulfur recovery units in North and South America, Europe, Middle East, Africa, Asia Pacific North and South.

Claus Reactor COS Conversion


1200 GHSV

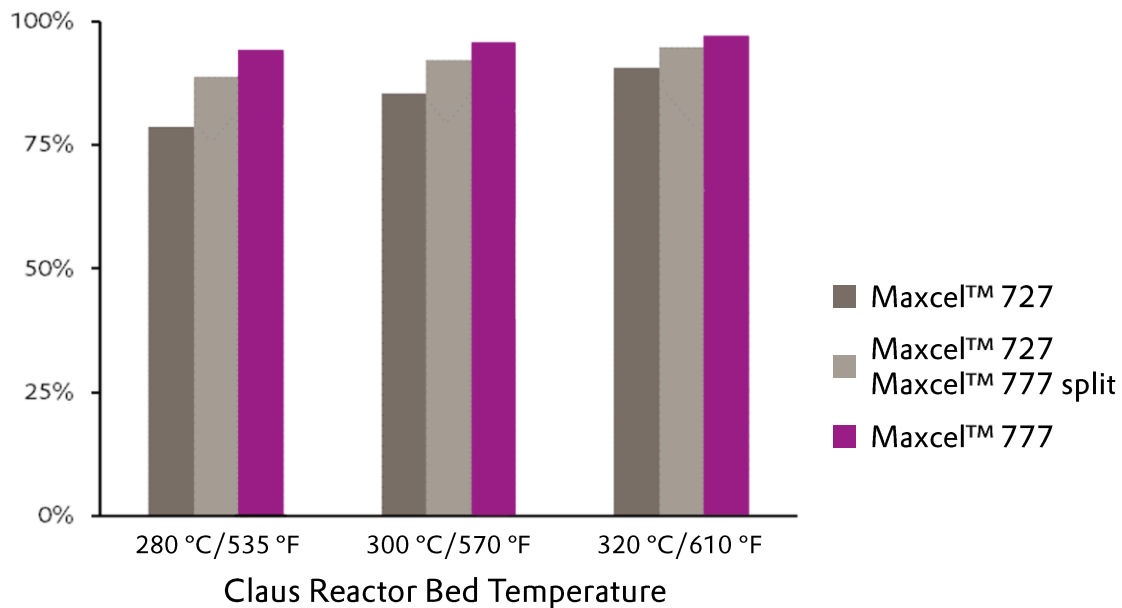

CLAUS CATALYSTS

Claus Reactor CS_2 Conversion

1200 GHSV

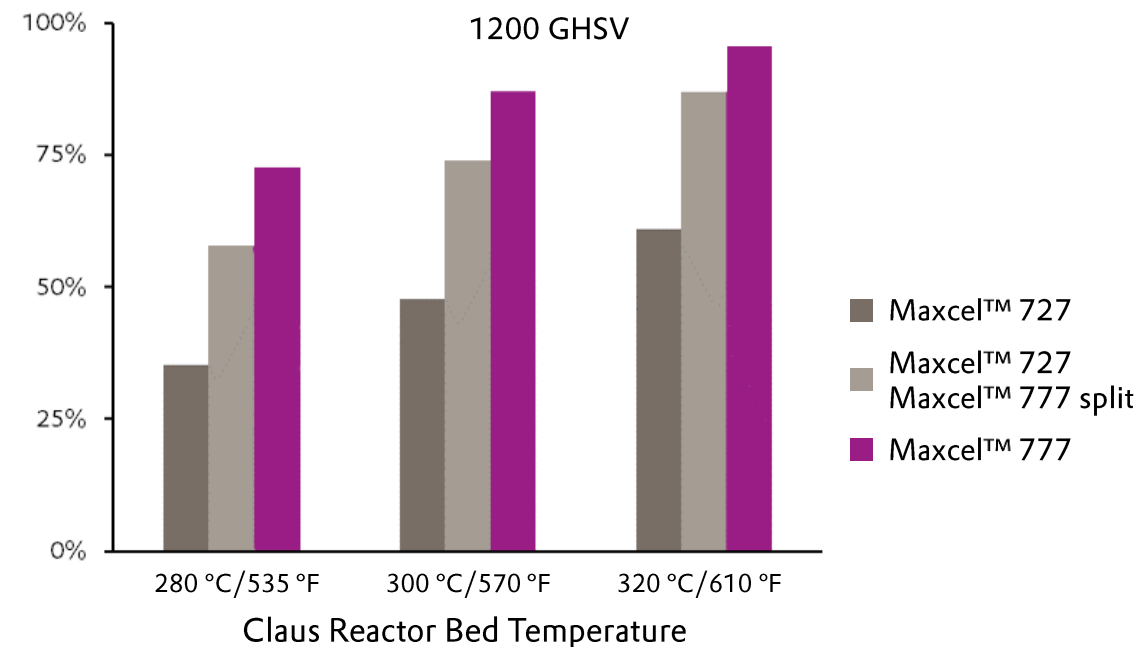

Maxcel™ 727 is Evonik's standard activated alumina Claus catalyst. For units requiring higher activity, **Maxcel™ 777** can be used to boost COS/CS_2 conversion or to save energy by lowering Claus reactor temperatures.

Evonik also offers Claus catalyst bed supports and specialty Claus catalysts, such as **Maxcel™ 740** (iron oxide-promoted oxygen scavenger) and **Maxcel™ SD-A** (activated alumina for sub-dew point Claus applications).

TAIL GAS CATALYSTS


For detailed product information about Maxcel™ and access to the technical product data sheets please visit us [here](#)

Maxcel™ TGS-01 a premier tail gas catalyst and is often used in conventional temperature tail gas reactors offering the lowest pressure drop of any tail gas catalyst in the industry.


Maxcel™ TGS-02 a low-temperature, high-activity spherical tail gas catalyst. For facilities that want to operate at low temperature (<240°C / <465°F reactor inlet temperature), Maxcel TGS-02 offers excellent activity.

Maxcel™ TGE-01 a fresh extruded tail gas catalyst manufactured with sustainable raw materials. Compared to the typical raw materials and manufacturing methods, Maxcel™ TGE-01 has a carbon footprint which is smaller by 30%.

Conversion in Tail Gas Reactor - Conventional -
1200 GHSV / 280°C bed temperature

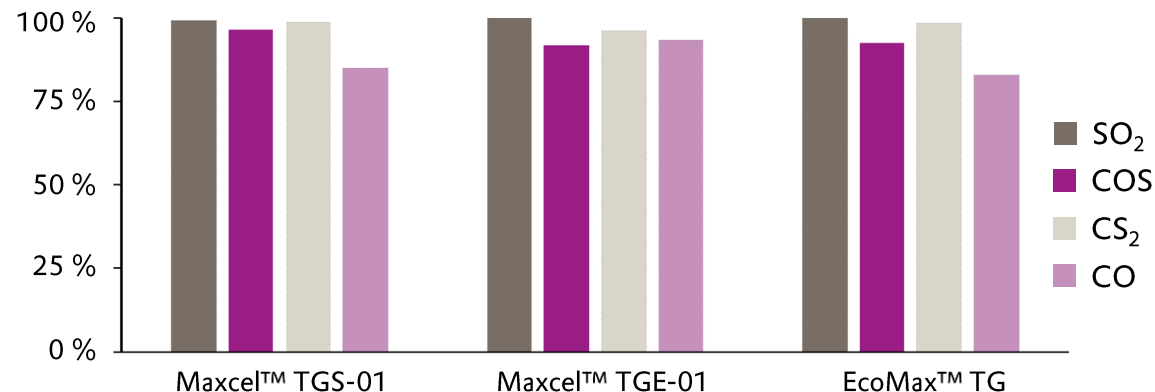

Conversion in Tail Gas Reactor - Low Temperature -
1200 GHSV / 240°C bed temperature

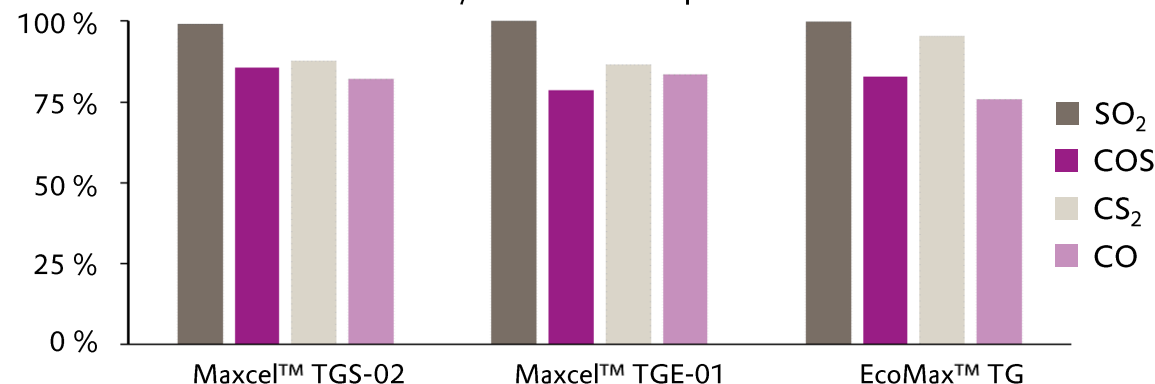

EcoMax™ TG a tail gas catalyst sourced from recycled hydroprocessing catalyst. This reduces catalyst waste, shrinks the carbon footprint of tail gas catalysts, delivers higher performance than many fresh tail gas catalysts, and offers significant cost savings.

Evonik also offers tail gas catalyst pre-sulfurization with **actiCAT® TG**, and pre-activation (full sulfiding) with **UltraCAT® TG**.

These treatments may be performed at the same facilities which manufacture tail gas catalysts, reducing transportation and intermediate packaging costs.

FIRST SUSTAINABLE TAIL GAS CATALYST

Maxcel™ TGE-01

- **Spherical cobalt-molybdenum (CoMo) on activated alumina** catalyst for use in **Claus tail gas treating** units that contain a hydrogenation reactor (e.g. SCOT tail gas units).
- Optimized catalyst support structure provides **high conversion of SO₂, COS, CS₂**, and elemental sulfur in Claus tail gas with very **low pressure drop**.
- Also **facilitates water-gas shift reaction** in the hydrogenation reactor to reduce CO emissions from tail gas incinerator, producing additional hydrogen for reduction.
- Designed for **use in tail gas units with a reactor inlet temperature of at least 500 °F (260 °C)**.
- Maxcel™ TGS-01 can be treated with actiCAT® TG presulfurization or UltraCAT® TG preactivation for simple and fast tail gas unit startup.



Traditional TG Catalysts



Maxcel™ TGE-01

- Fresh CoMo/Al tail gas catalyst
- Patented method of incorporating recovered metals from spent catalysts
- Same performance
- Lower cost
- Reduced environmental impact

* kg CO₂e per kg catalyst

CONTACTS

EVONIK OPERATIONS GMBH
Business Line Catalysts

catalysts@evonik.com
www.evonik.com/catalysts

United States

Evonik Corporation
Business Line Catalysts
1700 City Place Dr., Suite 510
Spring, TX 77389
USA
Phone +1 800 422-8773

[Get in touch](#)

Canada

Evonik Canada
2159 Brier Park PI NW
Medicine Hat, AB
T1C 1S7, Canada
Phone +1 403 527-4400

[Get in touch](#)

South America

Evonik Brazil Ltda.
Business Line Catalysts
Rua Arquiteto Olavo
Redig de Campos 105
Torre A – 13º e 14º andar
04711-904 – São Paulo SP
Brazil
Phone +55 19 3475 3065

[Get in touch](#)

Europe

Evonik Operations GmbH
Business Line Catalysts
Rodenbacher Chaussee 4
63457 Hanau-Wolfgang
Germany
Phone +49 6181 59-13399

[Get in touch](#)

United Arab Emirates

Evonik Gulf FZE
Dubai Silicon Oasis
Headquarters Building
Office E-107
PO Box 341256,
Dubai, UAE
Phone +971 4 372-4150

[Get in touch](#)

India

Evonik Catalysts India Pvt Ltd.
F - 1/2, MIDC Phase 1
Dombivli (East) – 421213
District Thane
India
Phone +91 251 2471716

[Get in touch](#)

China

Evonik Specialty
Chemicals (Shanghai) Co., Ltd.
Business Line Catalysts
55 Chungdong Road,
Xinzhuang Industry Park
201108 Shanghai
China
Phone +86 21 6119-1598

[Get in touch](#)

Japan

Evonik Japan Co., Ltd. Business
Line Catalysts Shinjuku
Monolith 12th Floor, 2-3-1,
Nishi-Shinjuku, Shinjuku-ku
163-0938 Tokyo
Japan
Phone +81 3 5323-7360

[Get in touch](#)

Singapore

Nordic European Park
3 International Business Park
Singapore 609927
Phone +65 6809-6666

[Get in touch](#)

Korea

Evonik Korea Ltd.
3F, Sungmookwan Nongshim
112 Yeoueidaebang-ro Dongjak-gu,
Seoul-si.
Republic of Korea
Phone: +82 2 320 4783

[Get in touch](#)

This information and any recommendations, technical or otherwise, are presented in good faith and believed to be correct as of the date prepared. Recipients of this information and recommendations must make their own determination as to its suitability for their purposes. In no event shall Evonik assume liability for damages or losses of any kind or nature that result from the use of or reliance upon this information and recommendations. EVONIK EXPRESSLY DISCLAIMS ANY REPRESENTATIONS AND WARRANTIES OF ANY KIND, WHETHER EXPRESS OR IMPLIED, AS TO THE ACCURACY, COMPLETENESS, NON-INFRINGEMENT, MERCHANTABILITY AND/OR FITNESS FOR A PARTICULAR PURPOSE (EVEN IF EVONIK IS AWARE OF SUCH PURPOSE) WITH RESPECT TO ANY INFORMATION AND RECOMMENDATIONS PROVIDED. Reference to any trade names used by other companies is neither a recommendation nor an endorsement of the corresponding product, and does not imply that similar products could not be used. Evonik reserves the right to make any changes to the information and/or recommendations at any time, without prior or subsequent notice.